





Remove the plastic bezel below the lightswitch

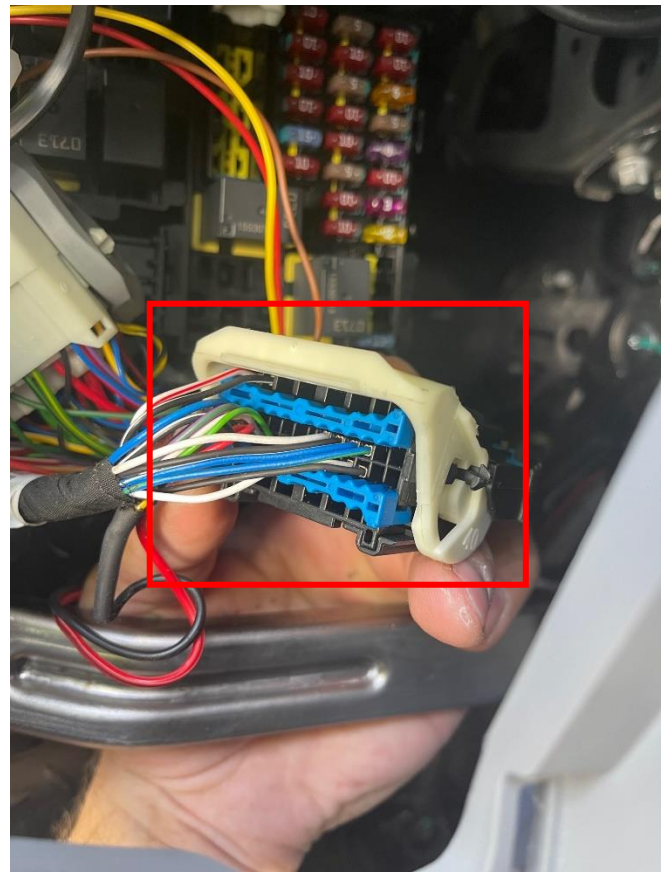

Locate this black/blue 40 PIN connector

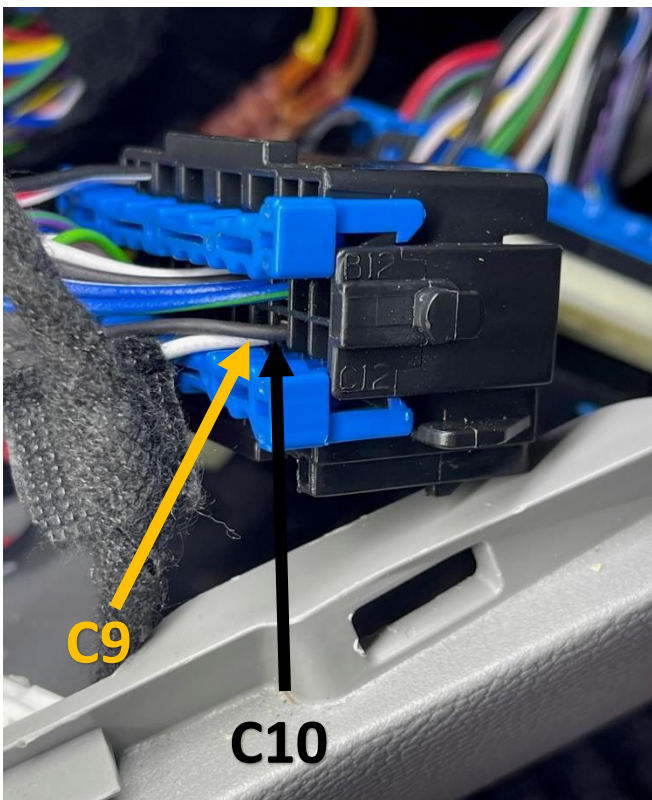

Connections of the CA-MAX01

YELLOW wire to pos. "C9"


BLACK wire to pos. "C10"

Connect long **RED** wire to ACC/Ignition 12/24v+


Connect long **BLACK** wire to ground

After successful connection – the headunit must be coded for rearview camera activation – see described steps on next pages.


NOTE: This headunit only accepts NTSC format

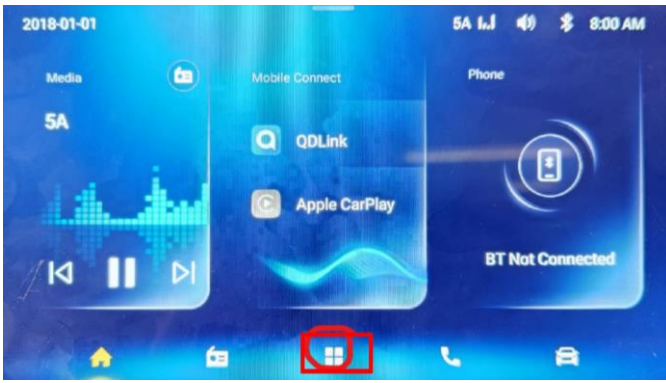


1. Select the "App icon"

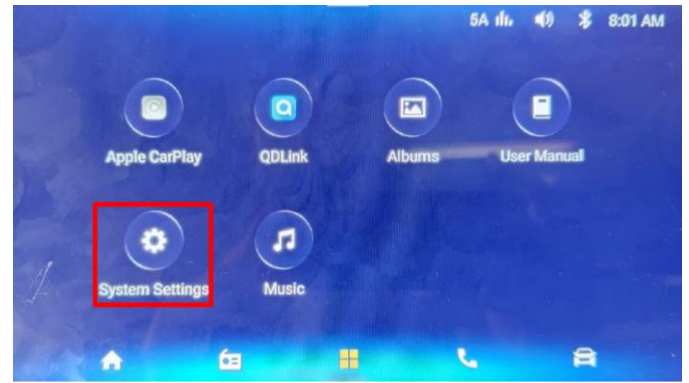

2. Select "System Settings"

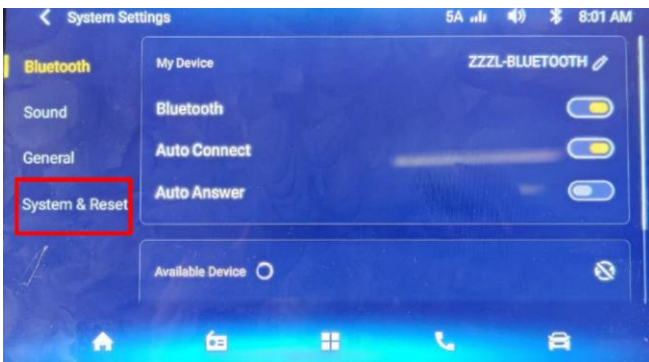


3. Select "System & Reset"

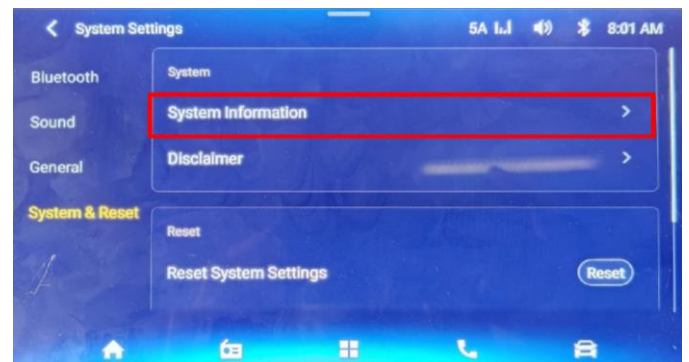

4. Select "System Information"



5. Touch the marked area with one finger for 5 sec.

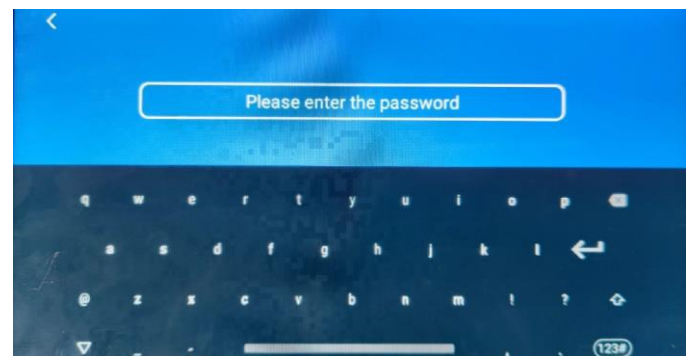

6. Enter the password: **s73p940a**



7. Select "Offline Configuration"

 


8. Scroll down and select "Vision 360"


9. In the “Vision 360” column – the Status Value are as described below



“No Camera”




“Rear view camera – No guidelines”

 

“Rear view camera + Static guidelines”



 “Rear view camera + Dynamic guidelines”



“Rear view camera + Dynamic & Static guidelines”




10. When selection have been made, choose “SAVE”



11. Select “Back arrow”



12. New selections will only take affect after the headunit have been reset. To do this, select “Reset” in the System & Reset menu

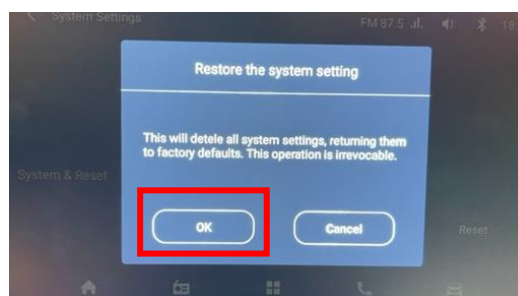

13. Select “OK” – then headunit will reboot. This takes aprox 1 min.