



How to adjust charge current of LPS II


- 1) From the start screen, press **OK** to enter Main Menu

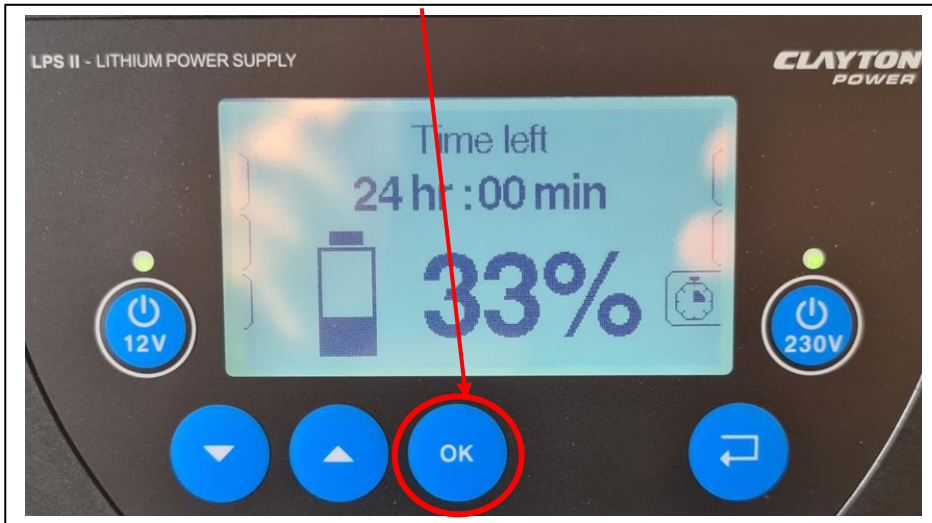


- 2) From the Main menu, press **arrow down** until "DC Charging", press **OK**

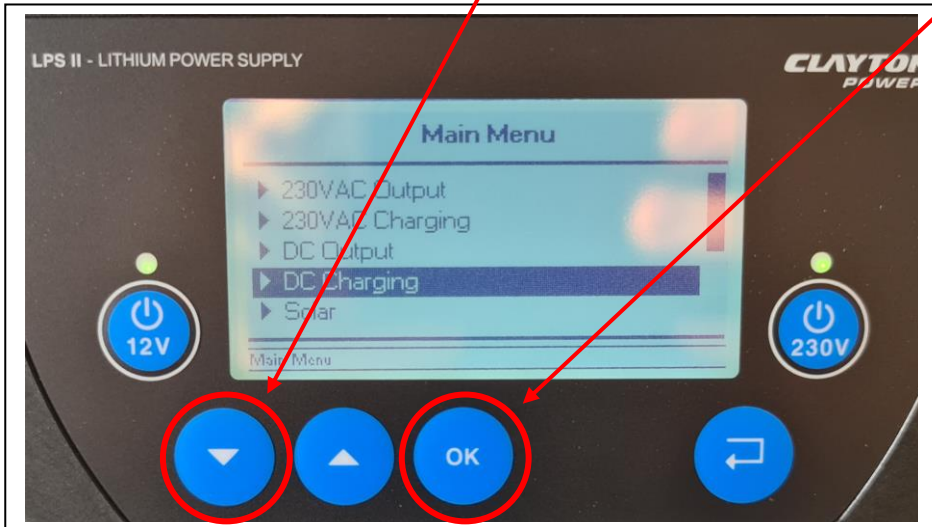

- 3) In the DC Charging menu, press **arrow down** until “Set Current” is reached, press **OK**

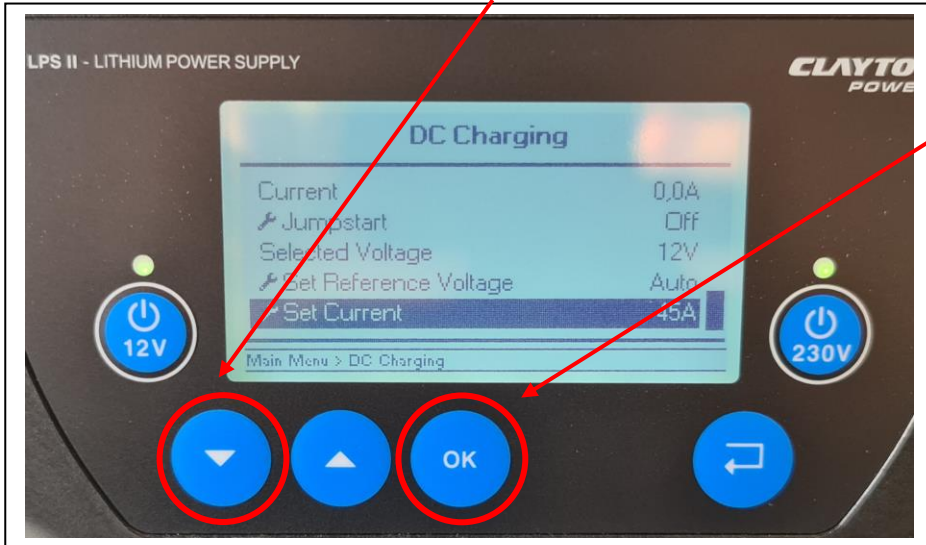

- 4) Press **arrow down** until wanted charge current is reached, then press **OK**.

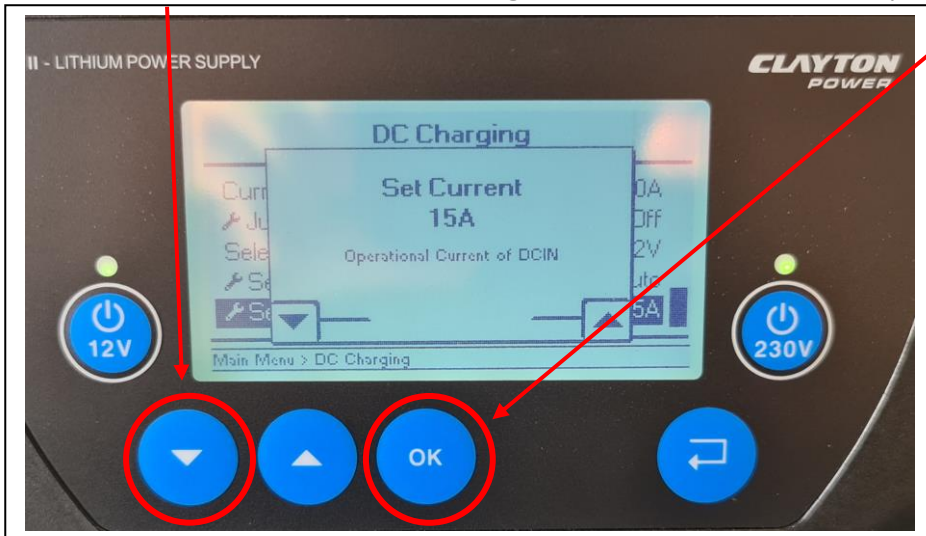

- 5) The new charge current can now be seen on the screen, press **Return** until start screen appears (1).

