


NEAT- SMART MOUNT

PEUGEOT EXPERT, CITROËN JUMPY, OPEL VIVARO, FIAT SCUDO 2024+
84300-1


INCLUDED IN THE KIT

- 2x Grille mounting brackets
- 2x Cutter guide
- 2x M6x65mm Stainless bolt
- 4x M6x16mm Stainless bolt
- 2x M6 Stainless washer
- 2x M6 Stainless nut
- 1x Fitting instructions.

TOOLS REQUIRED

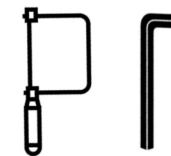

INSTALLATION PROCESS

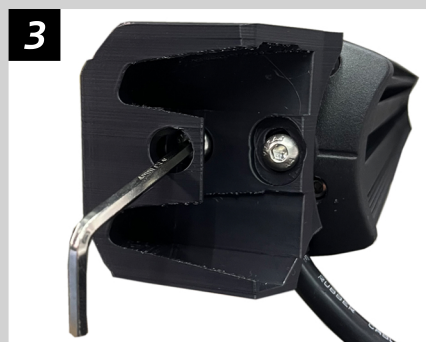

SE

- 1 Använd de bifogade mallen för att markera var de horisontella ribborna i grillen skall kapas. Skär även bort de mindre ribborna enligt bilden.
- 2 Utskärning.
- 3 Montera framsidan av SMART MOUNT-fästena på rampen med bifogade skruvar (M6x16).
- 4 Montera rampen och använd baksidan av SMART MOUNT och de bifogade skruvarna (M6x65mm) för att klämma fast runt ribban. Skruva åt med handverktyg, Ej med skruvdragare. Montera bifogade täcklock för skruvarna.
- 5 SMART MOUNT är nu monterat.

EN

- 1 Use the attached template to mark where the horizontal laths in the grille need to be cut. Also remove the smaller laths as shown.
- 2 Cut out.
- 3 Attach the front part of the SMART MOUNT brackets to the lightbar using the supplied screws (M6x16).
- 4 Mount the lightbar using the back of the SMART MOUNT and the supplied screws (M6x65mm) to clamp around the bar. Tighten with hand tools, not with power tools. Install the attached cover caps for the screws.
- 5 SMART MOUNT is now mounted.

